

# HYUNDAI V18.0

## Table of Contents

<b>1</b>	<b>Vehicle models covered.....</b>	<b>1</b>
<b>2</b>	<b>Vehicle systems covered.....</b>	<b>3</b>
<b>3</b>	<b>Vehicle Special Function covered.....</b>	<b>9</b>

### 1 Vehicle models covered

Area	Model	Year
Europe/General	ACCENT(LC)	2000-2007
Europe/General	ACCENT(MC)	2006-2011
Europe/General	ACCENT(RB)	2011-2015
Europe/General	ACCENT(X3)	1995-1999
Europe/General	ACCENT/SOLARIS(RBr)	2011-2015
Europe/General	ATOS PRIME(MXL)	2000-2004
Europe/General	ATOS(MX)	1998-2004
Europe/General	ATOS(MXI)-PDF	2003-2013
Europe/General	CENTENNIAL(LZ)	1999-2008
Europe/General	ELANTRA COUPE(JK)	2013-2015
Europe/General	ELANTRA(HD)	2007-2011
Europe/General	ELANTRA(J1)	1992-1995
Europe/General	ELANTRA(MD)	2012-2014
Europe/General	ELANTRA(MDI)	2013
Europe/General	ELANTRA(RD)	1996-2000
Europe/General	ELANTRA(UD)	2014
Europe/General	ELANTRA(XD)	2001-2006
Europe/General	EON(HA)	2012-2015
Europe/General	EQUUS/CENTENNIAL(VI)	2010-2015
Europe/General	GALLOPER-II(M1)-PDF	1997-2003
Europe/General	GENESIS COUPE(BK US)-U.S.	2013
Europe/General	GENESIS COUPE(BK)	2009-2015
Europe/General	GENESIS(BH US)-U.S.	2013
Europe/General	GENESIS(BH)	2009-2014
Europe/General	GENESIS(DH)	2014-2015
Europe/General	GETZ(TB)	2003-2011
Europe/General	GRAND i10/Xcent(BA)	2014-2015
Europe/General	GRAND SANTAFE(NC)	2014-2015
Europe/General	GRANDEUR(LX)	1994-1998
Europe/General	GRANDEUR(XG)	1999-2005
Europe/General	GRANDEUR/AZERA(HG)	2012-2015
Europe/General	GRANDEUR/AZERA(TG)	2006-2011
Europe/General	H-1 TRUCK(SR)	2001-2009
Europe/General	H-1(A1)	1997-2009
Europe/General	H-1/iMAX/iLOAD(TQ)	2008-2015

Area	Model	Year
Europe/General	H-100 TRUCK(AU)	1996-2003
Europe/General	H-100 TRUCK(HR)	2003-2015
Europe/General	H-100(AH)	1993-2001
Europe/General	HB20(HB)	2013-2015
Europe/General	HD COUPE(GK)	2002-2008
Europe/General	HD COUPE(RC)	1997-2001
Europe/General	i10(IA)	2014-2015
Europe/General	i10(PA)	2008-2015
Europe/General	i20(GB)	2015
Europe/General	i20(IB)	2015
Europe/General	i20(PB)	2009-2015
Europe/General	i30(FDe)	2009-2012
Europe/General	i30(GD)	2013-2015
Europe/General	i30(GDe)	2013-2015
Europe/General	i30/ELANTRA NEOS(FD)	2008-2012
Europe/General	i40(VF)	2012-2015
Europe/General	ix20(JC)	2011-2014
Europe/General	ix35 FCEV(LM FCEV)	2013-2015
Europe/General	ix35(EL)	2010-2015
Europe/General	MARCIA(H1)	1996-1998
Europe/General	MATRIX(FC)	2002-2011
Europe/General	SANTAFE(CM)	2006-2013
Europe/General	SANTAFE(DM)	2013-2015
Europe/General	SANTAFE(DMI)	2014
Europe/General	SANTAFE(SM)	2001-2006
Europe/General	SANTAMO(M2)	1997-2003
Europe/General	SONATA HYBRID(YF HEV US)-U.S.	2013
Europe/General	SONATA(EF)	1999-2006
Europe/General	SONATA(LF)	2015
Europe/General	SONATA(LFA)	2015
Europe/General	SONATA(NF)	2005-2010
Europe/General	SONATA(Y3)	1994-1998
Europe/General	SONATA(YFI)	2012-2014
Europe/General	SONATA/i45(YF)	2011-2015
Europe/General	TERRACAN(HP)	2001-2006
Europe/General	TRAJET XG(FO)	1999-2007
Europe/General	TUCSON FFV(JM FFV)	2012-2013
Europe/General	TUCSON(JM)	2005-2010
Europe/General	TUCSON/ix35(LM)	2010-2015
Europe/General	VELOSTER(FS)	2011-2015
Europe/General	VERACRUZ/ix55(EN)	2007-2013
Europe/General	VERNA(RBI)	2012-2014
US	ACCENT(LC)	2000-2005
US	ACCENT(MC)	2006-2011
US	ACCENT(RB)	2012-2013
US	ACCENT(X3)	1995-1999
US	AZERA(HG)	2012-2013
US	AZERA(TG)	2006-2011
US	ELANTRA COUPE(JK)	2013
US	ELANTRA GT(GD)	2013

Area	Model	Year
US	ELANTRA TOURING(FD)	2009-2012
US	ELANTRA(HD)	2007-2010
US	ELANTRA(J1)	1992-1995
US	ELANTRA(RD)	1996-2000
US	ELANTRA(UD/MD)	2011-2013
US	ELANTRA(XD)	2001-2006
US	ENTOURAGE(EP)	2007-2010
US	EQUUS(VI)	2011-2013
US	GENESIS COUPE(BK)	2010-2013
US	GENESIS(BH)	2009-2013
US	SANTAFE SPORT(DMA)	2013
US	SANTAFE(CM)	2007-2012
US	SANTAFE(NC)	2013
US	SANTAFE(SM)	2001-2006
US	SONATA HYBRID(YF HEV)	2011-2013
US	SONATA(EF)	1999-2005
US	SONATA(NF)	2006-2010
US	SONATA(Y2)	1989-1994
US	SONATA(Y3)	1994-1998
US	SONATA(YF)	2011-2013
US	TIBURON(GK)	2003-2008
US	TIBURON(RC)	1997-2001
US	TUCSON(JM)	2005-2009
US	TUCSON(LM)	2010-2013
US	VELOSTER(FS)	2012-2013
US	VERACRUZ(EN)	2007-2013
US	XG(XG)	2001-2005

## 2 Vehicle systems covered

System	DTC	Data_List	Active_Test	Special_Func
Active Air Flap	X	X	X	
Active Hood System	X	X	X	
Adaptive Front Lighting System	X	X	X	
AFLS [Adaptive Front Lighting System]	X	X	X	X
AGCS	X	X	X	
Air Conditioner	X	X	X	
Air Conditioner (2014.08.11~)	X	X	X	
Air Conditioner (GEN)	X	X	X	
Air Conditioner (Old)	X	X	X	
Airbag (Event #1)	X	X		
Airbag (Event #1) (~2014.08.10)	X	X		
Airbag (Event #2)	X	X		
Airbag (Event #2) (Old)	X	X		
Airbag (Event #2) (~2014.08.10)	X	X		
Airbag (GEN)	X	X		
Airbag (NAS)	X	X		

System	DTC	Data_List	Active_Test	Special_Func
Airbag Control	X	X		
Airbag Control (Without PAB SW)	X	X		
Airbag Control Unit	X	X		
Airbag [MULTISELECTION]	X	X		
Airbag [NAS]	X	X		
Airbag [PODS - F]	X			
Airbag [SRE - LC / HMC]	X	X		
Airbag [SRE - Smart (Dual Stage)]	X	X		
Airbag [Weight Classification]	X	X		
Anti - Lock Brake	X	X	X	X
Anti - Lock Brake (2WD)	X	X	X	
Anti - Lock Brake (4WD)	X	X	X	
Anti - Lock Brake System	X	X	X	
Around View Monitor System	X	X	X	
Around View Monitoring [Around View Monitor System]	X	X	X	
Auto Headlamp Leveling System	X	X	X	
Battery Management System [EV Battery System]	X	X	X	
Battery Management System [HEV Battery System]	X	X	X	
Blind Spot Detection	X	X	X	
Blind Spot Detection - Left	X	X	X	X
Blind Spot Detection - Right	X	X	X	X
Blower Pump Control Unit	X	X		
Body Control Module	X	X	X	
BODY CONTROL MODULE		X	X	
Body Control Module (2014.08.11~)	X	X	X	
Body Control Module (SMK - )	X	X	X	
Body Control Module (SMK+)	X	X	X	
Body Control Module (~2014.08.10)	X	X	X	
Body Control [Assist Door Module (Old)]	X	X	X	
Body Control [Assist Door Module]	X	X	X	
Body Control [Assist Power Seat Module]	X	X	X	
Body Control [Cluster Module (Old)]	X	X	X	
Body Control [Cluster Module (~2014.08.10)]	X			
Body Control [Cluster Module]	X	X	X	
Body Control [Cluster Variant Coding]	X			
Body Control [Driver Door Module (Old)]	X	X	X	
Body Control [Driver Door Module]	X	X	X	
Body Control [Electric Control Wiper (Old)]	X	X		
Body Control [Electric Control Wiper]	X	X		
Body Control [Front Area Module (Old)]	X	X	X	
Body Control [Front Area Module]	X	X	X	
Body Control [Front Back Warning System (Old)]	X	X		
Body Control [Front Back Warning System]	X	X		
Body Control [Head Up Display]	X	X		
Body Control [IMS]	X	X	X	

System	DTC	Data_List	Active_Test	Special_Func
Body Control [Instrument Panel Module (W / O PIC)]	X	X	X	
Body Control [Instrument Panel Module (W / PIC)]	X	X	X	
Body Control [Instrument Panel Module]	X	X	X	
Body Control [Instrument Panel Module (Old)]	X	X	X	
Body Control [Instrument Panel Module]	X	X	X	
Body Control [Integrated Memory System]	X	X	X	
Body Control [Multi Function Switch (Old)]	X	X		
Body Control [Multi Function Switch]	X	X		
Body Control [Power Distribution Module (Old)]	X	X	X	
Body Control [Power Distribution Module]	X	X	X	
Body Control [Power Seat Module (Old)]	X	X	X	
Body Control [Power Seat Module]	X	X	X	
Body Control [Power Trunk Module (Old)]	X	X		
Body Control [Power Trunk Module]	X	X		
Body Control [Rear Area Module]	X	X	X	
Body Control [Smart Junction Block]	X	X	X	
Body Control [Smart Junction Box]	X	X	X	
Body Control [Steering Column Module (Old)]	X	X	X	
Body Control [Steering Column Module]	X	X	X	
Body Control [Steering Wheel Remote Control]	X	X		
Body Control [Tilt / Telescope]	X	X	X	
Body Control [Tilt / Telescope]	X	X	X	
Body Control [User Option (Old)]		X		
Body Control [User Option]		X		
Brake [2WD]	X	X	X	
Brake [4WD]	X	X	X	
Brake [ABS (MGH - 25)]	X	X	X	
Brake [ABS / ESC]	X	X	X	X
Brake [ABS / ESP]	X	X	X	X
Brake [Active Hydraulic Booster]	X	X	X	
Brake [Electronic Stability Control]	X	X	X	X
Brake [Electronic Stability Program (Bosch)]	X	X	X	
Brake [Electronic Stability Program (Mobis)]	X	X	X	
Brake [Electronic Stability Program (Old)]	X	X	X	X
Brake [Electronic Stability Program]	X	X	X	X
Brake [ESP (+)]	X	X	X	
Brake [ESP (Melco Type)]	X	X	X	
Brake [ESP (MGH - 40) (~2010. 9.14)]	X	X	X	
Brake [TCS (+)]	X	X	X	
Brake [TCS (ITT Type)]	X	X	X	
Brake [Traction Control System]	X	X	X	

System	DTC	Data_List	Active_Test	Special_Func
Brake [Traction Control]	X	X	X	
Cluster Module	X	X	X	
Continuously Variable Transmission	X	X		X
Cruise Control System [Smart Cruise Control (2014.08.11~)]	X	X		
Cruise Control System [Smart Cruise Control (~2014.08.10)]	X	X		
DIS [Head Unit (Old)]	X	X	X	X
DIS [Head Unit]	X	X	X	X
DIS [Tuner / Amplifier (Old)]	X			
DIS [Tuner / Amplifier]	X			
DIS [Voice Recognition System]	X			
Driveshaft [4WD Control]	X	X	X	X
Driveshaft [TOD]	X			
Dual Clutch Transmission	X	X		X
E - Shifter	X	X	X	
Electric Hydraulic Power Steering	X	X	X	
Electric Hydraulic Power Steering (Old)	X	X	X	
Electric Parking Brake	X	X	X	X
Electric Parking Brake (Old)	X	X	X	
Electric Parking Brake [Electronic Parking Brake ]	X	X	X	
Electronic Control Suspension	X	X	X	
Electronic Control Suspension (Limousine)	X	X		
Electronic Control Suspension (Sedan)	X	X		
Electronic Hydraulic Power Steering System	X	X	X	
Electronic Power Steering	X	X	X	X
Engine Control	X	X	X	X
Engine Control (CPF - )	X	X	X	
Engine Control (CPF+)	X	X	X	
Engine Control (EOBD)	X	X	X	
Engine Control (ISG - / CPF - )	X	X	X	
Engine Control (ISG - / CPF+)	X	X	X	
Engine Control (ISG+ / CPF - )	X	X	X	
Engine Control (ISG+ / CPF+)	X	X	X	
Engine Control (Low Power)	X	X	X	
Engine Control (Low power)	X	X	X	
Engine Control (Non SULEV)	X	X	X	X
Engine Control (T / C)	X	X	X	
Engine Control (WGT)	X	X	X	
Engine [D 2.0 TCI - D (VGT)]	X	X	X	
Engine [EMS ECU]	X	X	X	
Engine [IFB ECU]	X	X	X	
Engine [Leaded All (EST+)]	X	X	X	
Engine [Leaded All]	X	X	X	X
Engine [Leaded IMMO]	X	X	X	
Engine [Leaded]	X	X	X	
Engine [Unleaded (Ti O2S) EOBD]	X	X	X	X
Engine [Unleaded (Ti O2S) GEN]	X	X	X	X
Engine [Unleaded (Ti O2S) OBD - II]	X	X	X	X

System	DTC	Data_List	Active_Test	Special_Func
Engine [Unleaded EOBD (TiO2)]	X	X	X	X
Engine [Unleaded EOBD]	X	X	X	X
Engine [Unleaded GDI All]	X	X	X	
Engine [Unleaded GEN (CVVT - )]	X	X	X	X
Engine [Unleaded GEN (CVVT+)]	X	X	X	X
Engine [Unleaded GEN (EST+)]	X	X	X	
Engine [Unleaded GEN]	X	X	X	X
Engine [Unleaded IMMO (TiO2)]	X	X	X	X
Engine [Unleaded IMMO]	X	X	X	X
Engine [Unleaded INDIA]	X	X	X	X
Engine [Unleaded MEX]	X	X	X	
Engine [Unleaded OBD - II (Non SULEV)]	X	X	X	X
Engine [Unleaded OBD - II]	X	X	X	X
Engine [Unleaded]	X	X	X	
Engine [VGT]	X	X	X	
ETACS		X	X	
FCEV Motor Control System	X	X		
Fuel Cell System	X	X	X	
Fuel Fired Heater	X	X	X	
Fuel Processing Driver	X	X	X	
Head Lamp [Adaptive Front Lighting System (Old)]	X	X	X	X
Head Lamp [Adaptive Front Lighting System]	X	X	X	X
Head Lamp [Adaptive Front Lighting]	X	X	X	X
Head Lamp [Adaptive Headlamp Lighting System]	X	X		
Head Lamp [AFLS (HID)]	X	X	X	X
Head Lamp [AFLS (LED)]	X	X	X	X
Head Lamp [AHLs]	X	X		X
Head Lamp [Auto Headlamp Leveling (Old)]	X	X		X
Head Lamp [Auto Headlamp Leveling System]	X	X	X	X
Head Lamp [Auto Headlamp Leveling]	X	X		X
Head Lamp [Automatic Headlamp Leveling System]	X	X		X
Head Lamp [Automatic Headlamp Leveling]	X	X		
HEV Control System	X	X		X
High DC / DC Convertor	X	X		
Hydrogen Storage System	X	X	X	
Immobilizer	X	X		X
Intelligent Accel Pedal	X	X	X	
Lane Departure Warning System	X	X		
Lane Departure Warning System [Lane Departure Warning System]	X	X		
LDWS [Lane Departure Warning System (China)]	X	X		
LDWS [Lane Departure Warning System (Old)]	X	X		
LDWS [Lane Departure Warning System]	X	X		

System	DTC	Data_List	Active_Test	Special_Func
LDWS [Lane Departure Warning System]	X	X		
LDWS [Lane Keeping Assist System]	X	X		
Low DC / DC Converter	X	X		
Motor Control System [HEV Motor System]	X	X	X	
Motor driven Power Steering	X	X		
Motor Driven Power Steering	X	X		
Motor Driven Power Steering (~September23 / 2011)	X	X		
Occupant Detection [Occupant Classification Sensor]	X	X		
Parking Guide System	X	X		
Power Distribution Module	X	X	X	
Power Sliding Door - LH	X	X		
Power Sliding Door - RH	X	X		
Power Steering	X	X	X	
Power Steering (~2012.02.22)	X	X	X	
Power Tail Gate	X	X		
Power Tail Gate [Power Tailgate]	X	X		
Pre - safe Seat Belt - Left	X			
Pre - safe Seat Belt - Left (Old)	X			
Pre - safe Seat Belt - Right	X			
Pre - safe Seat Belt - Right (Old)	X			
PSB [Pre - safe Seat Belt - Left]	X			
PSB [Pre - safe Seat Belt - Right]	X			
Smart Cruise Control	X	X		
Smart Cruise Control (Old)	X	X		
Smart Junction Block	X	X	X	
Smart Junction Box [Smart Junction Block]	X	X	X	
Smart Key Code Saving	X	X	X	X
Smart Key Code Saving (Old)		X		
Smart Key Unit	X	X	X	X
Smart Key Unit (2014.08.11~)	X	X	X	
Smart Key Unit (~2014.08.10)	X	X	X	
Smart Key [Interface Unit]	X	X	X	X
Smart Key [Power Distribution Module]	X	X	X	
Smart Parking Assist System	X	X	X	
SPAS [Smart Parking Assist System]	X	X	X	
Stack Volt Monitor	X	X		
Suspension [Active ECS]	X	X	X	
Suspension [ECS]	X	X	X	
Telematics Unit	X			
Tire Pressure Monitoring	X	X	X	
Tire Pressure Monitoring (High)	X	X	X	
Tire Pressure Monitoring (Low)	X	X	X	
Tire Pressure Monitoring (Old)	X	X	X	
Tire Pressure Monitoring System	X	X	X	
TPMS [Tire Pressure Monitoring]	X	X	X	
Transmission [4 - Speed]	X	X	X	X
Transmission [Automatic Transaxle (DCT)]	X	X	X	



System	DTC	Data_List	Active_Test	Special_Func
Transmission [Automatic Transaxle (Non SULEV)]	X	X	X	
Transmission [Automatic Transaxle]	X	X	X	X
Transmitter Code Saving		X		
Transmitter Code Saving (~2009.01.04)		X		
Transmitter Code Saving (~January 04 / 2009)		X		
Weight Classification System	X			

### 3 Vehicle Special Function covered

System	Special Function
AFLS [Adaptive Front Lighting System]	Calibration
Anti - Lock Brake	Longitudinal G Sensor Calibration (HAC / DBC Only)
Blind Spot Detection - Left	BSD Radar Calibration
Blind Spot Detection - Right	BSD Radar Calibration
Brake [ABS / ESC]	Longitudinal G Sensor Calibration (HAC / DBC Only)
Brake [ABS / ESP]	Longitudinal G Sensor Calibration (HAC / DBC Only)
Brake [ABS / ESP]	LONG G SENSOR CALIBRATION (ONLY EPB)
Brake [ABS / ESP]	LATERAL G SENSOR CALIBRATION
Brake [ABS / ESP]	PRESSURE SENSOR CALIBRATION
Brake [Electronic Stability Control]	Longitudinal G Sensor Calibration (HAC / DBC Only)
Brake [Electronic Stability Control]	LONG G SENSOR CALIBRATION (ONLY EPB)
Brake [Electronic Stability Control]	LATERAL G SENSOR CALIBRATION
Brake [Electronic Stability Control]	PRESSURE SENSOR CALIBRATION
Brake [Electronic Stability Program (Old)]	LONG G SENSOR CALIBRATION (ONLY EPB)
Brake [Electronic Stability Program (Old)]	LATERAL G SENSOR CALIBRATION
Brake [Electronic Stability Program (Old)]	PRESSURE SENSOR CALIBRATION
Brake [Electronic Stability Program]	Longitudinal G Sensor Calibration (HAC / DBC Only)
Continuously Variable Transmission	Resetting Auto T / A Values
DIS [Head Unit (Old)]	Update from CD
DIS [Head Unit (Old)]	Ring Break
DIS [Head Unit (Old)]	Get All S / W Version
DIS [Head Unit]	Update from CD
DIS [Head Unit]	Ring Break
DIS [Head Unit]	Get All S / W Version
Driveshaft [4WD Control]	Clutch Learning Reset
Dual Clutch Transmission	DCT Manual Input Function (Transmission Exchange)
Electric Parking Brake	PAD Change Mode (Before Change)
Electric Parking Brake	PAD Change Mode (After Change)
Electronic Power Steering	EPS Type Recognition
Engine Control	Read VIN
Engine Control	Resetting Adaptive Values
Engine Control	Auto Detected Configuration Reset
Engine Control	Resetting E - CVVT Values

System	Special Function
Engine Control	ECU Initialization
Engine Control	A / F Value imposing
Engine Control	A / F Learning
Engine Control	ISG TEST (Option)
Engine Control (Non SULEV)	Resetting Adaptive Values
Engine Control (Non SULEV)	Auto Detected Configuration Reset
Engine [Leaded All]	Resetting Adaptive Values
Engine [Leaded All]	Read VIN
Engine [Leaded All]	Auto Detected Configuration Reset
Engine [Unleaded (Ti O2S) EOBD]	Resetting Adaptive Values
Engine [Unleaded (Ti O2S) EOBD]	Auto Detected Configuration Reset
Engine [Unleaded (Ti O2S) GEN]	Resetting Adaptive Values
Engine [Unleaded (Ti O2S) GEN]	Auto Detected Configuration Reset
Engine [Unleaded (Ti O2S) OBD - II]	Resetting Adaptive Values
Engine [Unleaded (Ti O2S) OBD - II]	Auto Detected Configuration Reset
Engine [Unleaded EOBD (TiO2)]	Resetting Adaptive Values
Engine [Unleaded EOBD (TiO2)]	Auto Detected Configuration Reset
Engine [Unleaded EOBD]	Resetting Adaptive Values
Engine [Unleaded EOBD]	Read VIN
Engine [Unleaded EOBD]	Auto Detected Configuration Reset
Engine [Unleaded GEN (CVVT - )]	Resetting Adaptive Values
Engine [Unleaded GEN (CVVT - )]	Auto Detected Configuration Reset
Engine [Unleaded GEN (CVVT+)]	Resetting Adaptive Values
Engine [Unleaded GEN (CVVT+)]	Auto Detected Configuration Reset
Engine [Unleaded GEN]	Resetting Adaptive Values
Engine [Unleaded GEN]	Read VIN
Engine [Unleaded GEN]	Auto Detected Configuration Reset
Engine [Unleaded IMMO (TiO2)]	Resetting Adaptive Values
Engine [Unleaded IMMO (TiO2)]	Auto Detected Configuration Reset
Engine [Unleaded IMMO]	Resetting Adaptive Values
Engine [Unleaded IMMO]	Auto Detected Configuration Reset
Engine [Unleaded IMMO]	Read VIN
Engine [Unleaded INDIA]	Resetting Adaptive Values
Engine [Unleaded OBD - II (Non SULEV)]	Resetting Adaptive Values
Engine [Unleaded OBD - II (Non SULEV)]	Auto Detected Configuration Reset
Engine [Unleaded OBD - II]	Read VIN
Engine [Unleaded OBD - II]	Resetting Adaptive Values
Engine [Unleaded OBD - II]	Auto Detected Configuration Reset
Head Lamp [Adaptive Front Lighting System (Old)]	Calibration
Head Lamp [Adaptive Front Lighting System]	Calibration
Head Lamp [Adaptive Front Lighting]	Calibration
Head Lamp [AFLS (HID)]	Calibration
Head Lamp [AFLS (LED)]	Calibration
Head Lamp [AHLS]	Sensor Initialization
Head Lamp [Auto Headlamp Leveling (Old)]	Sensor Initialization
Head Lamp [Auto Headlamp	Sensor Initialization

System	Special Function
Leveling System]	
Head Lamp [Auto Headlamp Leveling]	Sensor Initialization
Head Lamp [Automatic Headlamp Leveling System]	Sensor Initialization
HEV Control System	Engine Test Off
Immobilizer	Password Teaching / Changing
Immobilizer	EMS Neutral Mode
Immobilizer	Limp Home Mode
Immobilizer	Smatra Neutral Mode
Immobilizer	Neutral Mode
Smart Key Code Saving	Current FOB Key Check
Smart Key Unit	Current FOB Key Check
Smart Key Unit	ESCL OPEN STATUS CHECK
Smart Key Unit	ESCL ENABLE OUTPUT CHECK
Smart Key [Interface Unit]	ECM Neutralization
Smart Key [Interface Unit]	IFU Neutralization
Transmission [4 - Speed]	Resetting Auto T / A Values
Transmission [Automatic Transaxle]	Resetting Auto T / A Values
Transmission [Automatic Transaxle]	CLEAR CAN Learnable Status
Transmission [Automatic Transaxle]	[N] Position The Adaptive