

# TOYOTA PRO V12.2

## Table of Contents

<b>1</b>	<b>Vehicle Models covered</b> .....	<b>1</b>
<b>2</b>	<b>Vehicle Systems covered</b> .....	<b>4</b>
<b>3</b>	<b>Vehicle Utilities covered</b> .....	<b>8</b>
<b>4</b>	<b>Vehicle Customize Setting covered</b> .....	<b>11</b>

### 1 Vehicle Models covered

Model	Year
4RUNNER	Up to 2014
86	Up to 2014
ALLION/PREMIO	Up to 2014
ALPHARD	Up to 2014
ALPHARD HV	Up to 2014
ALPHARD HV/VELLFIRE HV	Up to 2014
ALPHARD/VELLFIRE	Up to 2014
ALTEZZA/ALTEZZA GITA	Up to 2014
AQUA	Up to 2014
ARISTO	Up to 2014
AURIS	Up to 2014
AURIS HV	Up to 2014
AVALON	Up to 2014
AVALON HV	Up to 2014
AVANZA	Up to 2014
AVENSIS	Up to 2014
AVENSIS VERSO/PICNIC	Up to 2014
AYGO	Up to 2014
BELTA	Up to 2014
BLADE	Up to 2014
CALDINA	Up to 2014
CAMRY	Up to 2014
CAMRY HV	Up to 2014
CAMRY/AURION	Up to 2014
CARB Mode	Up to 2014
CARINA	Up to 2014
CARINA E	Up to 2014
CELICA	Up to 2014
CELSIOR	Up to 2014
CENTURY	Up to 2014
COASTER	Up to 2014
CONDOR	Up to 2014
COROLLA	Up to 2014
COROLLA AXIO/FIELDER	Up to 2014

Model	Year
COROLLA RUMION	Up to 2014
COROLLA RUNX/ALLEX	Up to 2014
COROLLA SPACIO	Up to 2014
COROLLA VERSO	Up to 2014
COROLLA/AURIS	Up to 2014
CORONA	Up to 2014
CRESSIDA	Up to 2014
CROWN	Up to 2014
CROWN COMFORT	Up to 2014
CROWN ESTATE	Up to 2014
CROWN HV	Up to 2014
CROWN MAJESTA	Up to 2014
CROWN Mild Hybrid	Up to 2014
CROWN PATROL CAR	Up to 2014
Cami	Up to 2014
Celica/CURREN	Up to 2014
DYNA	Up to 2014
DYNA 150/100	Up to 2014
DYNA 200	Up to 2014
Duet	Up to 2014
E'Z	Up to 2014
ECHO	Up to 2014
ESTIMA	Up to 2014
ESTIMA HV	Up to 2014
ETIOS	Up to 2014
FCHV-ADV	Up to 2014
FCHV-adv	Up to 2014
FJ CRUISER	Up to 2014
FORTUNER/HILUX SW4	Up to 2014
Fun Cargo	Up to 2014
GAIA	Up to 2014
Granvia/GRAND HIACE	Up to 2014
HARRIER	Up to 2014
HARRIER HV	Up to 2014
HIACE	Up to 2014
HIGHLANDER	Up to 2014
HIGHLANDER HV	Up to 2014
HIGHLANDER HV	Up to 2014
HIGHLANDER/KLUGER	Up to 2014
HILUX	Up to 2014
HIMEDIC	Up to 2014
HONGQI	Up to 2014
HS250h	Up to 2014
INNOVA/KIJANG INNOVA	Up to 2014
IPSUM	Up to 2014
IQ	Up to 2014
IQ EV	Up to 2014
KIJANG	Up to 2014
KLUGER	Up to 2014
KLUGER HV	Up to 2014

Model	Year
LAND CR PRADO	Up to 2014
LAND CR.	Up to 2014
LAND CRUISER	Up to 2014
LAND CRUISER PRADO	Up to 2014
LFA	Up to 2014
LITEACE	Up to 2014
MARK X	Up to 2014
MARK X Zio	Up to 2014
MARK2 QUALIS/CAMRY GRACIA	Up to 2014
MARK2/MARK2 BLIT	Up to 2014
MATRIX	Up to 2014
MR-S	Up to 2014
MR2	Up to 2014
MR2 SPYDER	Up to 2014
NADIA	Up to 2014
NOAH	Up to 2014
NOAH/VOXY	Up to 2014
Opa	Up to 2014
PASEO	Up to 2014
PASSO	Up to 2014
PASSO SETTE	Up to 2014
PICNIC	Up to 2014
PIXIS EPOCH	Up to 2014
PIXIS SPACE	Up to 2014
PIXIS Truck/Van	Up to 2014
PLATZ	Up to 2014
PORTE/SPADE	Up to 2014
PREVIA	Up to 2014
PREVIA/TARAGO	Up to 2014
PRIUS	Up to 2014
PRIUS +/PRIUS V	Up to 2014
PRIUS C	Up to 2014
PRIUS PLUG-IN	Up to 2014
PRIUS Plug-in	Up to 2014
PRIUS V	Up to 2014
PRIUS alpha	Up to 2014
PROBOX/SUCCEED	Up to 2014
PROGRES/BREVIS	Up to 2014
Pronard	Up to 2014
QUALIS	Up to 2014
QUICKDELIVERY	Up to 2014
RACTIS	Up to 2014
RAUM	Up to 2014
RAV4	Up to 2014
RAV4 EV	Up to 2014
REIZ	Up to 2014
RUKUS	Up to 2014
RUSH	Up to 2014
Rush	Up to 2014
SAI	Up to 2014

Model	Year
SDF Vehicle	Up to 2014
SEQUOIA	Up to 2014
SIENNA	Up to 2014
SIENTA	Up to 2014
SOARER	Up to 2014
SOLARA	Up to 2014
SOLUNA(AFC)	Up to 2014
SPACIO	Up to 2014
STARLET	Up to 2014
SUPRA	Up to 2014
SURF	Up to 2014
Sparky	Up to 2014
T100	Up to 2014
TACOMA	Up to 2014
TAMARAW	Up to 2014
TERCEL	Up to 2014
TOWNACE	Up to 2014
TUNDRA	Up to 2014
UNSER	Up to 2014
URBAN CRUISER	Up to 2014
VANGUARD	Up to 2014
VELLFIRE	Up to 2014
VENZA	Up to 2014
VERSO-S/RACTIS	Up to 2014
VIOS	Up to 2014
VITZ	Up to 2014
VOLTZ	Up to 2014
Verossa	Up to 2014
Vista/Vista Ardeo	Up to 2014
WINDOM	Up to 2014
WISH	Up to 2014
WillCypha	Up to 2014
Will VS	Up to 2014
Will Vi	Up to 2014
XA	Up to 2014
YARIS	Up to 2014
YARIS HV	Up to 2014
YARIS VERSO/ECHO VERSO	Up to 2014
YARIS/ECHO	Up to 2014
ZACE	Up to 2014
ZELAS	Up to 2014
bB	Up to 2014
iQ	Up to 2014
iQ EV	Up to 2014
ist	Up to 2014

## 2 Vehicle Systems covered

System	DTC	Data List	Active Test	Utility
--------	-----	-----------	-------------	---------

System	DTC	Data List	Active Test	Utility
4WD_CAN	X	X	X	
ABS	X	X	X	X
ABS/VSC/TRAC	X	X	X	X
ABS/VSC/TRC	X	X	X	X
ABS_CAN	X	X	X	X
AFS	X	X	X	X
AHC	X	X	X	X
AHS	X	X	X	
ASG	X	X	X	X
Accessory Gateway	X	X	X	
Active Headrest L	X	X	X	
Active Headrest R	X	X	X	
Active Rear Wing	X	X	X	
Advanced Parking Guidance/Parking Assist Monitor	X	X	X	
Air Conditioner	X	X	X	X
Air Suspension	X	X	X	X
Audio System	X	X	X	
Back Door	X	X	X	
Back Door P/W	X	X	X	
Battery	X	X	X	
Blind Spot Monitor Master	X	X	X	X
Blind Spot Monitor Slave	X	X	X	X
Body	X	X	X	
Body No.2	X	X	X	
Body No.3	X	X	X	
Body No.4	X	X	X	
Body No.5	X	X	X	
CARB Mode ECU	X	X	X	
Center Console Switch		X	X	
Charging Control	X	X	X	
Clearance Sonar	X	X	X	X
Combination Meter	X	X	X	
Combination Switch		X	X	
Cruise Control	X	X		
D-Door Motor	X	X	X	
D-SEAT SW		X		
DRS	X	X	X	X
Driver Door	X	X	X	
Driver Seat	X	X	X	
E-ACM	X	X	X	
ECB Gateway	X	X	X	
ECM Gateway	X	X	X	
ECT	X	X	X	X
EMPS	X	X	X	X
EMS	X	X	X	
EV	X	X	X	X
EV Battery	X	X	X	X
Electric Parking Brake	X	X	X	X
Electric Power Control	X	X	X	

System	DTC	Data List	Active Test	Utility
Electric Propulsion Control System	X	X	X	
Engine	X	X	X	X
Engine (LH Bank)	X	X	X	X
Engine (RH Bank)	X	X	X	X
Engine and ECT	X	X	X	X
Engine2	X	X	X	X
Entry&Start	X	X	X	X
Entry&Start(CAN)	X	X	X	X
FC	X	X	X	
FCHV	X	X	X	
Four Wheel Drive	X	X	X	X
Free-Tronic	X	X	X	
Front Left Door	X	X	X	
Front Left Seat A/C	X	X	X	
Front Right Door	X	X	X	
Front Right Seat A/C	X	X	X	
Front Stabilizer	X	X	X	
Gateway	X	X	X	
Gateway BEAN	X	X	X	
Gateway CAN	X	X	X	
Gateway V	X	X	X	
Grill Shutter	X	X	X	
HL AutoLeveling	X	X	X	
HV Battery	X	X	X	
HV Gateway	X	X	X	
Hybrid Control	X	X	X	X
IPA/Parking Assist Monitor	X	X	X	
Immobiliser	X	X	X	
Intuitive P/A	X	X	X	
KDSS	X	X	X	
Lane Departure Alert	X	X	X	X
Lane Keeping Assist	X	X	X	X
Laser Cruise	X	X		X
Main Body	X	X	X	X
Master Switch	X	X	X	X
Mayday Gateway	X	X	X	
Mirror	X	X	X	
Mirror L		X	X	
Mirror R		X	X	
Multi Bus Gateway	X	X	X	
Multi Bus Monitor No.1	X	X	X	
Multi Bus Monitor No.2	X	X	X	
Multi-Mode M/T	X	X	X	
Navigation System	X	X	X	X
Night View	X	X	X	
Occupant Detection	X	X	X	X
P Master Switch	X	X	X	
P-Door Motor	X	X	X	
PM1 Gateway	X	X	X	

System	DTC	Data List	Active Test	Utility
PM2 Gateway	X	X	X	
PPS	X	X	X	
Passenger Door	X	X	X	
Passenger Seat	X	X	X	
Plug-in Control	X	X	X	X
Power Source Control	X	X	X	X
Pre-Collision	X	X	X	
Pre-Collision 2	X	X	X	
Pre-Crash	X	X	X	
Pre-Crash 2	X	X	X	X
RL-Door Motor	X	X	X	
RR-Door Motor	X	X	X	
Radar Cruise	X	X		X
Rain Sensor	X	X	X	
Rear Console Switch	X	X	X	
Rear Left Door	X	X	X	
Rear Left Seat	X	X	X	
Rear Left Seat A/C	X	X	X	
Rear Right Door	X	X	X	
Rear Right Seat	X	X	X	
Rear Right Seat A/C	X	X	X	
Rear Seat Switch	X	X	X	
Rear Stabilizer	X	X	X	
Remote Engine Starter	X	X	X	X
Retractable Hardtop	X	X	X	
SRS Airbag	X	X	X	X
SRS Side Airbag	X	X	X	
Sequential M/T	X	X	X	X
Sliding Roof	X	X	X	
Smart Access	X	X	X	
Smart Key	X	X	X	
Stabilizer	X	X	X	X
Starting Control	X	X	X	
Steering Lock	X	X	X	
Steering Pad Switch	X	X	X	
Stop and Go	X	X	X	
Stop and Start	X	X	X	
TRAC	X	X	X	
TVSS	X	X	X	
Telematics	X	X	X	
Theft Deterrent	X	X	X	
Tilt&Telescopic	X	X	X	
Tire Pressure Monitor	X	X	X	X
Transmission Control	X	X	X	
VGRS	X	X	X	X
Vehicle Control	X	X	X	X
WIL Gateway	X	X	X	
Wiper		X	X	

### 3 Vehicle Utilities covered

System	Utilities
ABS/VSC/TRC	2nd Sys. Air Bleeding
ABS/VSC/TRC	Air Bleeding
ABS/VSC/TRC	Check Mode
ABS/VSC/TRC	ECB Utility
ABS/VSC/TRC	ES Calibration
ABS/VSC/TRC	Inspection Mode
ABS/VSC/TRC	Reset Memory
ABS/VSC/TRC	Test Mode
ABS/VSC/TRC	VSC Sensor Neutral Memorization
ABS/VSC/TRC	VSC/TR(A)C/4WD Control Prevention Mode
ABS/VSC/TRC	Vehicle Information Synchronization
ABS_CAN	Air Bleeding
ABS_CAN	ECB Utility
ABS_CAN	Inspection Mode
ABS_CAN	Reset Memory
ABS_CAN	Test Mode
AFS	AHS Camera Optic Axis Adjustment
AFS	AHS Shade Angle Adjustment
AFS	ECU Information Sync
AFS	Steering Sensor Initialization
AHC	Height Offset
ASG	ASG System Initial Learning
ASG	All Readiness
Active Rear Wing	Rear Wing Zero Point Calibration
Air Conditioner	Blower Motor Brush Wear Amount Initialization
Air Conditioner	Rear Cooling Unit Check
Air Conditioner	Refrigerant Gas Volume Check
Air Conditioner	Servomotor Initialization
Air suspension	Height Offset
Blind Spot Monitor Master	BSM Master Abnormal History
Blind Spot Monitor Master	BSM Master Beam Axis Adjustment
Blind Spot Monitor Master	BSM Master Beam Axis Display
Blind Spot Monitor Master	BSM Master Beam Axis Inspection
Blind Spot Monitor Slave	BSM Slave Abnormal History
Blind Spot Monitor Slave	BSM Slave Beam Axis Adjustment
Blind Spot Monitor Slave	BSM Slave Beam Axis Display
Blind Spot Monitor Slave	BSM Slave Beam Axis Inspection
Clearance Sonar	Steering Initialization
DRS	Check Mode
ECT	A/T Code Registration
ECT	A/T Code Reset
ECT	All Readiness
ECT	Check Mode
ECT	Reset Memory
EMPS	Abnormal Operation History
EMPS	Check Mode
EMPS	Torque Sensor Adjustment
EV	Battery Pack Malf Fail-Safe Drive History Clear



System	Utilitys
EV	Check Mode
EV	Inspection Mode
EV	VIN
EV Battery	Battery Diagnosis
EV Battery	Battery Status Info Update
EV Battery	Check Mode
EV Battery	HV Batt Cell Low Volt READY ON Prevention Cancel
EV Battery	Temporary Vehicle Start Up
Electric Parking Brake	Check Mode
Electric Parking Brake	Reset Memory
Engine	A/F Sensor Compensation Reset
Engine	A/T Code Registration
Engine	A/T Code Reset
Engine	All Readiness
Engine	CVT Oil Pressure Calibration
Engine	Catalyst Record Clear
Engine	Catalyst Record Read
Engine	Catalyst Record Transferring
Engine	Check Mode
Engine	Crank Time Compensation Reset
Engine	DPF Deterioration Record Clear
Engine	Deceleration Sensor Zero Point Calibration
Engine	Electric Throttle Learning
Engine	Engine History Utility
Engine	Engine Oil Pressure Control Check
Engine	Injector Compensation
Engine	Learning Value Reset
Engine	Learning Values Confirmation
Engine	Learning Values Save
Engine	Learning Values Write
Engine	Pilot Quantity Learning
Engine	Pilot Quantity Learning Values Clear
Engine	Pilot Quantity Learning Values Reset
Engine	Pilot Quantity Learning(Detail)
Engine	Pressure Discharge Valve Check
Engine	Reset Memory
Engine	Shift Control Synchronization
Engine	Supply Pump Initialization
Engine	VIN
Engine	Vehicle Mileage Write
Engine	i-ART Learning Value Reset
Engine (LH Bank)	Check Mode
Engine (LH Bank)	Reset Memory
Engine (RH Bank)	Check Mode
Engine (RH Bank)	Reset Memory
Engine and ECT	A/F Sensor Compensation Reset
Engine and ECT	A/T Code Registration
Engine and ECT	A/T Code Reset
Engine and ECT	All Readiness
Engine and ECT	CVT Oil Pressure Calibration

System	Utilitys
Engine and ECT	Catalyst Record Clear
Engine and ECT	Catalyst Record Read
Engine and ECT	Catalyst Record Transferring
Engine and ECT	Check Mode
Engine and ECT	Crank Time Compensation Reset
Engine and ECT	DPF Deterioration Record Clear
Engine and ECT	Deceleration Sensor Zero Point Calibration
Engine and ECT	Electric Throttle Learning
Engine and ECT	Engine History Utility
Engine and ECT	Engine Oil Pressure Control Check
Engine and ECT	Injector Compensation
Engine and ECT	Learning Value Reset
Engine and ECT	Learning Values Confirmation
Engine and ECT	Learning Values Save
Engine and ECT	Learning Values Write
Engine and ECT	Pilot Quantity Learning
Engine and ECT	Pilot Quantity Learning Values Clear
Engine and ECT	Pilot Quantity Learning Values Reset
Engine and ECT	Pilot Quantity Learning(Detail)
Engine and ECT	Pressure Discharge Valve Check
Engine and ECT	Reset Memory
Engine and ECT	Supply Pump Initialization
Engine and ECT	VIN
Engine and ECT	Vehicle Mileage Write
Engine and ECT	i-ART Learning Value Reset
Engine2	All Readiness
Engine2	Check Mode
Engine2	Drive History Reset
Entry&Start	Wireless Door Lock Diagnosis Mode
Four Wheel Drive	4WD Control Prevention Mode
Four Wheel Drive	Reset Memory
Four Wheel Drive	VSC/TR(A)C/4WD Control Prevention Mode
HV Battery	Initialization
Hybrid Control	B1 Air Bleeding
Hybrid Control	Battery Diagnosis
Hybrid Control	Battery Status Info Update
Hybrid Control	HV Batt Cell Low Volt READY ON Prevention Cancel
Hybrid Control	Initialization
Hybrid Control	Inspection Mode
Hybrid Control	Normal Battery Stack Average Voltage Calculation
Hybrid Control	Prediagnostic Battery Charge
Hybrid Control	Reset Memory
Hybrid Control	Temporary Vehicle Start Up
Hybrid Control	VIN
Lane Departure Alert	Camera Axis Adjust
Lane Departure Alert	Camera/Target Position Memory
Lane Keeping Assist	Camera Axis Adjust
Lane Keeping Assist	Camera/Target Position Memory
Laser Cruise	Laser/Radar Cruise Initialization
Main Body	Wireless Door Lock Diagnosis Mode

System	Utilitys
Master Switch	Reset Memory
Navigation System	Map Information
Navigation System	Optical Disc Error History
Navigation System	Software Error History
Occupant Detection	Sensitivity Check
Occupant Detection	Zero Point Calibration
Plug-in Control	Check Mode
Plug-in Control	Quick Charge Relay Diagnosis
Power Source Control	Auto Power OFF Cancel
Pre-Crash 2	Camera Axis Adjust
Pre-Crash 2	Camera/Target Position Memory
Pre-Crash 2	Rear Beam Axis Adjustment
Pre-Crash 2	Recog ECU H Temp Hist Reset
Radar Cruise	Beam Axis Misalignment Reading
Radar Cruise	Laser/Radar Cruise Initialization
Remote Engine Starter	Trouble Factor Code Clear
SRS Airbag	Check Mode
Sequential M/T	Parts Exchange
Stabilizer	Stabilizer System Check
Tire Pressure Monitor	ID Registration
VGRS	Abnormal Operation History
VGRS	Check Mode
VGRS	Steering Angle Adjust
Vehicle Control	Starter Actuation Count Utility

#### 4 Vehicle Customize Setting covered

Customize Setting
Air Conditioner
Compass Calibration
Display
Door Lock
Illuminated Entry
Light Control
Option Setup
PSD & PBD operation
Power Window
Retractable Hardtop
Seat
Security
Sensor
Slide Roof
Smart Key / Access
TVSS
Tilt & Telesco
Unit conversion
Warning
Wiper
Wireless Door Lock

Customize Setting

Others